


NOTE: WHEN FASTENING CURB TO SUPPORTS, OR WHEN FASTENING PANELS TO CURB, FASTENERS MUST BE KEPT 1 1/2" FROM PURLIN TO PREVENT LOCKING DOWN THE FLOATING CURB.

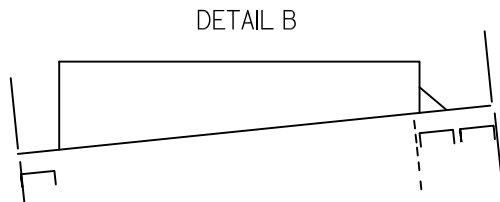


ON THE PLACEMENT OF CROSS CHANNELS, THE OD OF CROSS CHANNELS ARE EQUAL TO, OR FLUSH WITH THE OUTER EDGES OF THE FRONT AND REAR OUTER CURB FLANGES. CROSS CHANNELS ARE TO SUPPORT CURB FLANGE AND ROOF PANEL CONNECTION.

INSTALLATION INSTRUCTIONS:

1. SET PURLIN SPAN CHANNEL ASSEMBLY ACROSS PURLINS. POSITION PURLIN SPAN MEMBERS TO ALIGN UNDER THE FLAT OF ROOF PANEL.
2. PLACE CROSS CHANNELS OVER PURLIN SPAN CHANNELS, ADJUST SPACING TO CURB SIZE.
3. AFTER SUPPORT SYSTEM IS IN PLACE, CHECK FRAME OPENING TO CURB I.D. INSERT FOUR ROOF CLIP FASTENERS INTO EACH STIRRUP AS SHOWN ON DRAWING.
4. MANUFACTURER RECOMMENDS INSTALLER PROCEED WITH INSTALLATION OF THE CURB AT THIS TIME.

TRAC Rail DOUBLE SPAN CURB SUPPORT SYSTEM

US Patent Number 5,647,175 @ Copy Right, 1997. All Rights Reserved.

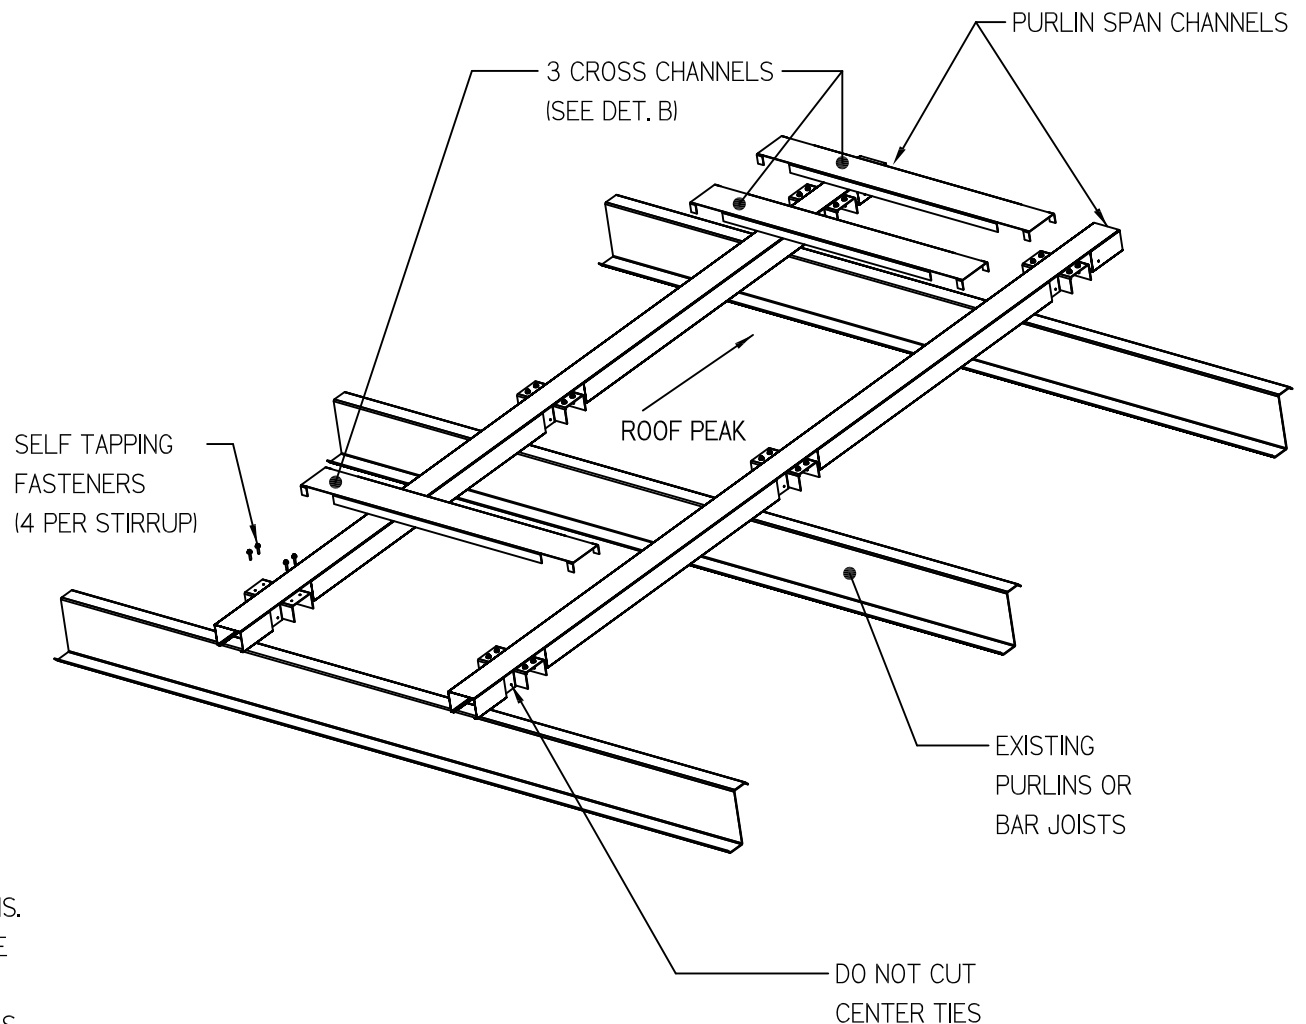

DESCRIPTION: INSTALLATION DRAWING

DRAWN BY: DATE:

APPROVED BY:

SHEET: REVISION:

DOCUMENT NO: